


INSTALLATION OF THIS KIT IS ON A CUSTOMER REQUEST AND PAY BASIS ONLY

Crown Victoria Police Interceptor
Decklid Cover Plate Installation
Fits 1998 to current model year vehicles.

1. Drill 6.3 mm (1/4") diameter hole in decklid inner surface at horizontal center line of reverse lamp access hole 8 mm (5/16") inboard of access hole edge. **CAUTION: AVOID CONTACTING WIRING AND LAMP ASSEMBLY WHEN DRILLING HOLE.**
2. Insert AW73-54457A01-AA cover plate through access hole. Position fingers on outboard edge.
3. Align cover plate weld nut with drilled hole in decklid inner surface.
4. Secure cover plate with W710772-S900 screw through drilled hole. Tighten screw to 2.5 +/- 0.3 Nm. (22.0 +/- 2.7 in lbs.).

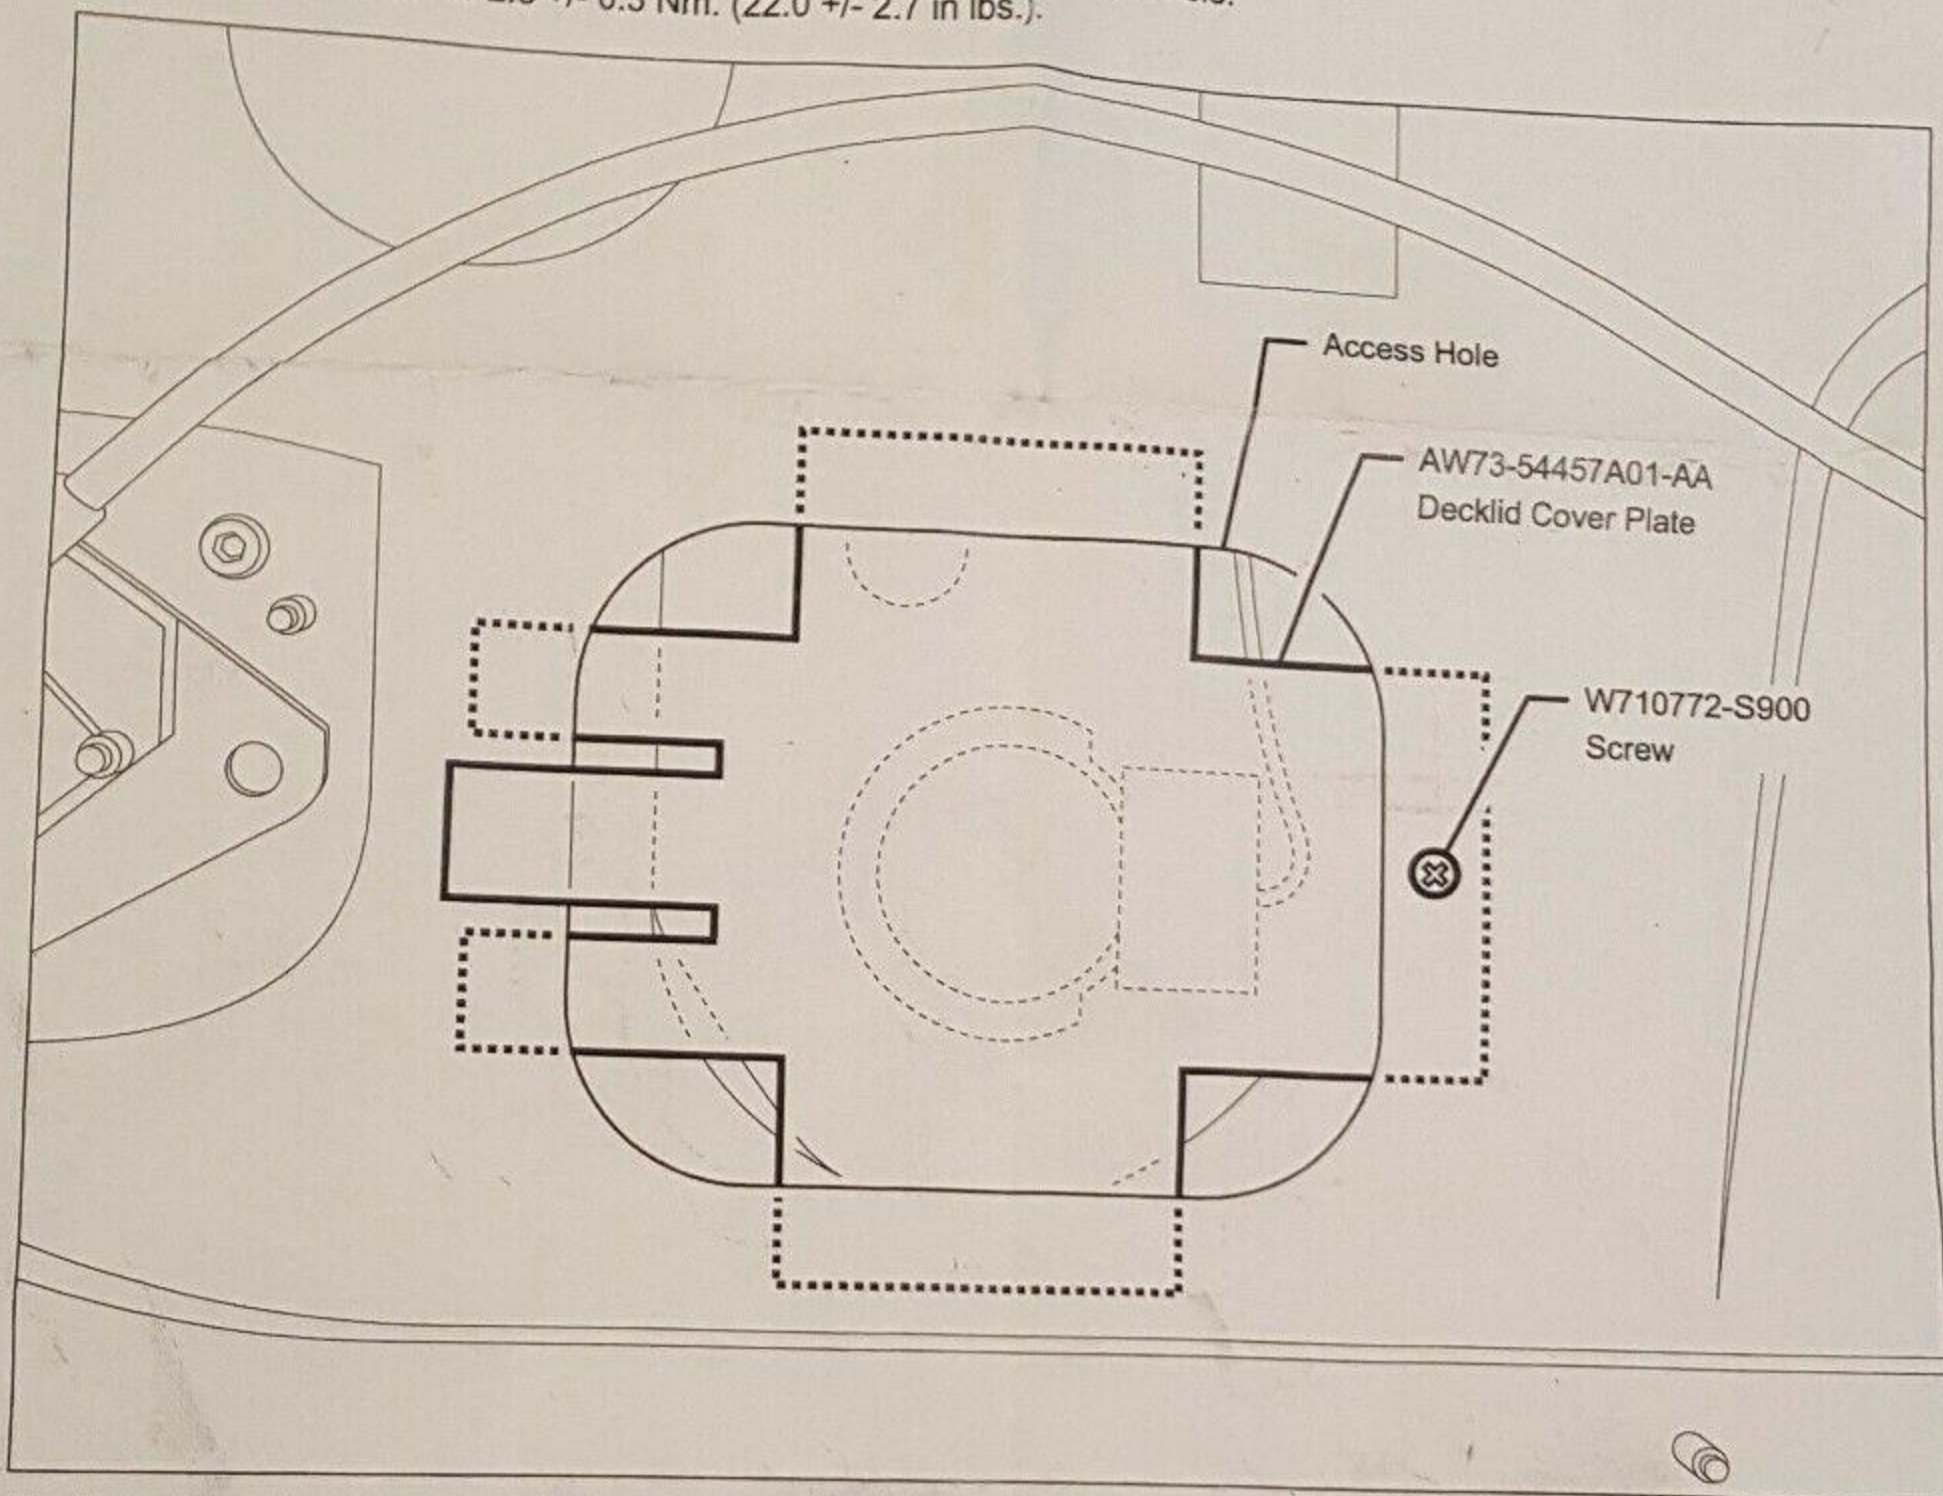

Position cover plate tabs on aft surface of decklid sheet metal (RH shown, LH symmetrically opposite)